


To Disarm System

1. Press the **ARM/DISARM** Button
2. When Prompted enter Access Code and press **ENTER** 
3. Select which partition you want to disarm:
 - **THIS PARTITION:** disarms the local partition
 - **MY PARTITIONS:** disarms only the partitions your Access Code is programed to control

Note: The keypad will display *Disarmed* when in *Disarmed* State.

To Arm Your System

1. Press the **ARM/DISARM** Button
2. When Prompted Enter Access Code and press **ENTER**
3. Select which partition you want to arm:
 - **THIS PARTITION:** Arms the local partition
 - **MY PARTITIONS:** Arms only the partitions your Access Code is programed to control
4. Press **ENTER**

Note: The keypad will briefly display: **PLEASE WAIT WHILE ARMING..**

Occupied Security

1. Press Advanced Security (2nd to last option on keypad)
2. Select Occupy Option

Instant: Sends an alarm immediately

Delay: Allows for authorized persons to leave or enter through designated doors before sending an alarm to the monitoring console. All other exterior protection will generate immediate alarms when violated

