



### To Arm Your System

1. Press the **ARM/DISARM** Button
2. When Prompted Present Key Fob or enter Access Code and press **ENTER**  
**NOTE:** *Your Access Code should be 5-8 digits*
3. Select which partition you want to arm:
  - **THIS PARTITION:** Arms the local partition
  - **MY PARTITIONS:** Arms only the partitions your Access Code is programmed to control**NOTE:** *See Partition list if not sure*
4. Press **ENTER**  
Note: The keypad will briefly display: **PLEASE WAIT WHILE ARMING..**
5. When the keypad displays: ARMED 30 SECONDS TO EXIT. The Keypad sounder will begin beeping. Exit the door or building and verify the door is closed and locked  
**Note:** *The keypad will display Armed when in Armed State*

### To Disarm System

1. Press the **ARM/DISARM** Button
2. When Prompted Present Key Fob or enter Access Code and press **ENTER**  
**NOTE:** *Your Access Code should be 5-8 digits*
3. Select which partition you want to disarm:
  - **THIS PARTITION:** disarms the local partition
  - **MY PARTITIONS:** disarms only the partitions your Access Code is programmed to control**NOTE:** *See Partition list if not sure*
4. Press **ENTER**  
Note: The keypad will display Disarmed when in Disarmed State.